

EN Start Here

TC 入門指南

MiNi double-station MUG press

迷你雙功位烤杯機



warnings must be followed carefully to avoid bodily injury. 必須嚴格遵守警告事項以免身體受損。





Unpacking 拆裝 Contents may vary by location 内容可能因爲地區而有所不同

> Please remove the packing foam carefully and keep well for maintenance. 請小心移除設備外包裝泡沫。并保存好該包裝材料,以備維修時使用。



1.請使用能負載機器額定功率的電源
 2.保持設備的通風,遠離易然物品
 3.將設備放置在水平平坦的表面
 4.在儲存,運輸和運行環境中,請注意防水







Feature commentary 控制面板詳解

	ር	電源開關
	8	倒計時開始
	Ø	進入設置
8	+	數值增加
8	-	數值減少
	1	加熱狀態



Dower

👌 👌 LEFT RIGHT

Press power button at back of the machine, it will start to heat and air inflating by itself after five seconds. Press left button, start heating Press right

button, start

heating.



State 1: Short press to set temperature. Press again to set time. Press again to quit. State 2: Press 5 seconds to set pre-heating temperature to avoid mug pad air burning. State 1: Press TIMING one time to start. State 2: Press 4 seconds to reset. State 3: Can be used as "+" and "-" under stand-by state. State 1: You can increase value under setting state. State 2: Press 2 seconds, hear one beep, you can press "-"to set processing capacity.

PLUS

MINUS

State 1: You can decrease value under setting state. State 2: Press 5 seconds, hear one beep, press "+" to set processing capacity.

Ċ

打開機器後面船形 電源開關,機器通 電,5秒後自動開 始加熱幷衝氣。 ● 打開左邊加熱開始

打開右邊加熱開始



狀態1: 短按進入溫度設置 再按進入時間設置 再按退出 狀態2: 長按5秒進入預熱 溫度設置,預防烤 杯墊空燒。

狀態1: 按一下倒計時開始 狀態2: 長按4秒計時復位 狀態3: 在待機狀態下可當 + -號使用

+ 狀態1:

₩.8.1: 在設置狀態下可增加數值。 狀態2: 長按2秒後滴一聲響後再按-鍵,可設置加工數量。 狀態1: 在設置狀態下可減 少數值。 狀態2: 長按5秒後滴一聲 響後再按+鍵,可 設置加工數量。

组合键功能解说

1、預熱溫度設置



長按5秒時入預熱溫度設置,出廠 初始溫度爲100度。 2、加工量設置



先長按 "+" 2秒聽到蜂鳴一聲, "+" 不鬆開, 再按下 "-", 蜂鳴一聲。進入計數設置。 鬆開按鍵後,按 "+" -" 調節加工數量。 3、總量統計



先長按"-"2秒聽到蜂鳴一聲,"-"不鬆開, 再按下"+",蜂鳴一聲。進入從出廠到當前 總的數量統計。

Function Commentary of Combination Key

- 1, pre-heat temperature setting
 - +5s

Press 5 seconds start pre-heat temperature setting.Factory default temperature is 100°C.




2, processing capacity setting

Press "+" for two seconds, hear one beep, keep press. Then press "-", after hear one beep, you can set. Release button, press "+" and "-" to set amount.

3、gross statistics




Press "-" for two seconds, hear one beep, keep press. Then press "+", after hear one beep ,you can see the gross statistics from factory default to now.

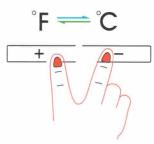

注意:同時按住(+/-)鍵可快速實現攝氏度 和華氏度之間的轉换。

Attention: Press (+ / -) at the same time, you can switch between °F &°C.

Accessory Name Graphic 配件名稱圖解

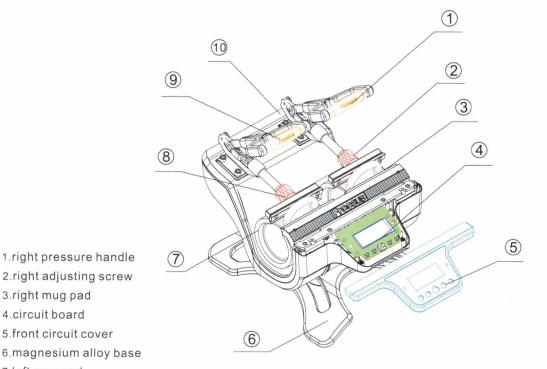

1、	右」	玉力	手	柄
2、	右;	周节	螺	<u>44</u>
3、	右炸	考杯	垫	
4	电量	格 主	板	
5、	前日	电 路	盖	板
6、	镁台	合 金	底	座
7、	左 炸	考杯	垫	
8、	左认	周节	螺	<u>44</u>
9、	左匠	玉力	手	柄

10、烤杯垫接线位

2.right adjusting screw 3.right mug pad 4.circuit board 5.front circuit cover 6.magnesium alloy base 7.left mug pad 8.left adjusting screw 9.left pressure handle 10.mug pad terminal block



Transfer tips

Question: Transfer paper shows yellow after printing. Or writings on the picture seems faint. Answer: Lower temperature and reduce the heating time. Question: Paper still keep white after printing, and picutre color on products don't show good. Sometimes get white stain. Answer: Higher temperature and increase time. Question: Effect is not good in some condition. Answer: The temperature and time have to be changed acoordintly due to different paper, products, machines and weather condition.

轉印技巧:

轉印時如紙發黃、圖片黑色文字發虚時,應降低温度和减少時間, 如:轉印紙還是白色、圖片色彩不鮮艷,有白色斑點或部分没有 轉印上去,請加高温度或延長時間。全黑圖片應加長轉印時間, 因產品種類、圖片色彩、紙張不同、機器温差、天氣温差等不同 原因,轉印時温度及時間會有一些微調。

Main S Advanced () Fag	e Layout	Cp Haint	enance		
Paper & Quality Options		Color Manage	ement		
Sheet		<u>Color Con</u>			
Epson Premium Glossy	144	PhotoEnh ICM	lange		
Photo RPM	1				
44 210 x 297 mm	-	Color Mode	Adobe R	GB	2
Borders O Borderless		Gamma	22		*
Drientation				Reset	Controls
Portrait O Landscage					
hint Options		Brightness	+0		Y 11
Reverse Order		Contrast	+ 0		2
High Speed		Saturation	+ 0		0
Grayscalg		Cyan 🗢	+0		0
Edge Smoothing Print Preview		Magența @	+0		0
		Yellow 🥥	+0		0-
ustom Settings 💌 Save Set	ting				
Beset Defaults Technica	al Support				

主留口 () 版面 () 维护 丁印紙与质量选项 (2) 单页纸 _ □ 无边距 (2) 委普生高质量光泽纸 _ □	色彩管理 ○ 色彩控制 © Gamma ○ PhotoEnhange 2.2 ▼ ○ IQN
組片 1878 ▲ 210 × 297 毫米 す 約 「 の 約 向 (2) (横向 (2)) 丁印除志項 「 逆序打印 (2)	色彩模式 (2) (1) (1) (1) (1) (1) (1) (1) (1) (1) (1
 ○ 商速(2) 「卓越 BicroFeave(2) > 边缘平者(2) 打印预览(2) 	春色(U) ◎ [+0] / · · · · · · · · · · · · · · · · · ·
定义设置 ▼ 存储设置(2)	□ 首先显示此屏幕 (E)
· 恢复默认设置 (B) 技术支	持 基础(3)

▶(6)

▶ ⑦

8



用户姓名 The name:	
聯系方式 Contact:	
購買日期 Date:	
經 銷 商 Dealer:	

Freesub

	duct certification 産品合格證
檢驗員 Examine	ər:
日期 Date:	

