


Sublimation Stationery Pencil Case



1. Trace jig outline onto cardboard. And cut as many peices as you need to create a stack approximately ~1.5cm - 2cm thick. This will accomodate the thickness of the zipper during pressing.



2. Tape your pieces together using heat proof tape. Note: This is important as ordinary tape may melt and ruin your blank.

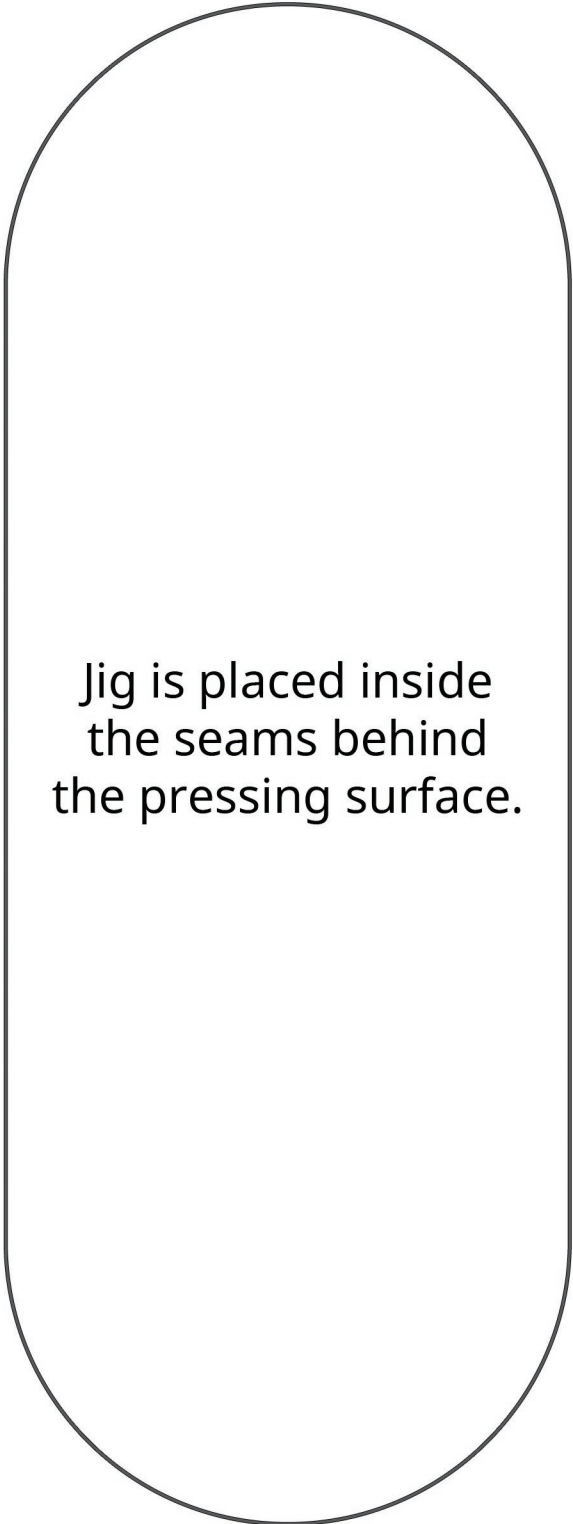

Jig is placed inside the seams behind the pressing surface.